



Pushbutton (e)	press.
Folding key (d)	fold out approx. 90°.
Dowel pin (h)	press out with a punch 1.5 mm dia., install.
Key insert (d)	detach, attach.

## Note

Folding keys from transmitter keys up to 09/93 cannot be installed in the smaller transmitter key as of 10/93 and vice versa. For this reason when ordering transmitter keys always order transmitter together with folding key indicating 16-digit lock number. Only the approx. 40 % smaller transmitter keys are now available.