



**A. Removal and installation of undamaged trim strips**

Radiator grille .....	remove (88-401).
Horizontal trim strips (2) .....	pull out 6 each in outward direction or slide in from outside
Vertical trim strip (5) .....	pull out in downward direction or slip in from below

**B. Renewing damaged trim strips**

Trim strip (2) .....	cut with side-cutting pliers (arrow) and pull out carefully from under radiator cowling
Plastic clip (3) .....	3 each, insert into new trim strip
Trim strip (2) .....	slip in and push plastic clips into holding projections on radiator grille
Vertical trim strip (5) .....	renew likewise and additionally cut off the holding projections on radiator grille