



1914 - 15190

Removal

- | | |
|------------------------------|----------------------------------------------------------------------|
| Seat belt extender | move to offering position by switching on ignition and closing door. |
| Ground lead on battery | disconnect (within 30 s). |
| Guide (1) | remove from rack (2) together with seat belt. |
| Rack(2) | pull out of guide rail (3). |

Installation

- | | |
|------------------------------|-----------------------------------------------------------|
| Rack (2) | insert into guide rail (3) approx. 50 mm (see also note). |
| Guide (1) | install. |
| Ground lead on battery | connect. |

Note

The retraction depth of the rod can be adjusted with the slide (arrow). For this purpose move seat belt extender to offering position and push slide forward or back.

