


## 67-220 R and R rear window molding

---


### Removal

---

- 1 Remove rear window (67-200).
- 2 Place rear window on suitable base.
- 3 Push cover aside at bottom left and right.

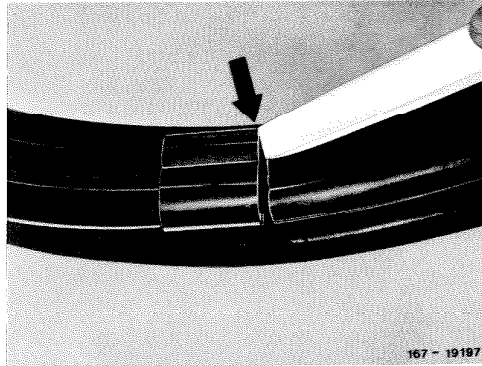

- 4 Push cover aside at top center.
- 5 Push ornamental frame out of sealing frame by means of a plastic wedge.

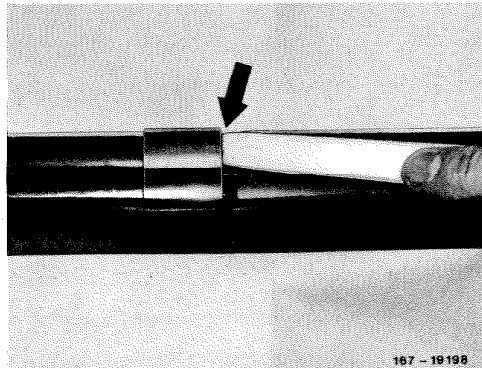

### Installation

---

**Note:** Prior to installing ornamental frame, slightly coat slot on sealing frame with benzine. Fill upper gap of ornamental frame — prior to mounting cover — with MB-glass sealing compound, so that no water can flow over rear window from under cover.

- 6 For installation proceed vice versa.