


# 88-110 R and R trim molding below headlamp unit

Sedan

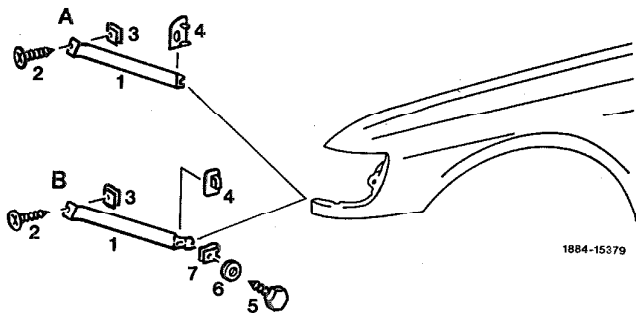

**A 1st version**

- Screw (2) ..... unscrew
- Trim molding (1) ..... remove
- Holder (4) ..... remove
- Metal clip (3) ..... pull off

**B 2nd version (turn-signal lamp removed)**

- Screw (2) ..... unscrew
- Screw (5) and washer (6) ..... unscrew and remove
- Trim molding (1) ..... remove
- Metal clip (3, 7) ..... remove
- Edge protection (4) ..... pull off

**Note**


Replacement trim moldings are only available in 2nd version. For repairs on vehicles of the 1st version the trim molding must be reworked (see scope of work).

## 88-110 R and R trim molding below headlamp unit


### Removal

Headlamp unit and turn-signal lamp removed.

- 1 Unscrew fender mounting screw.
- 2 Straighten the offset part of the fender mounting strap so that a level contact surface is obtained for the trim molding.

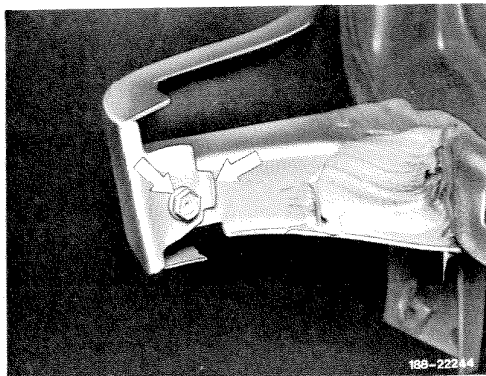

- 3 Cut the front part of the trim molding retaining strap at the folding edge. Protect cutting edge against corrosion.

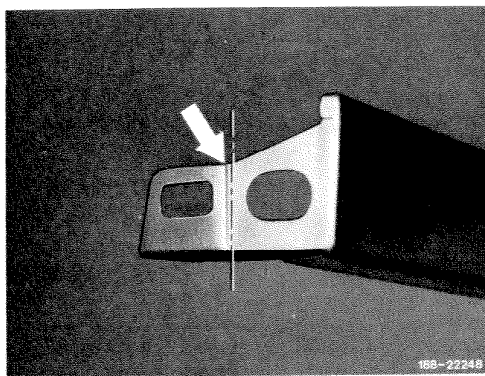

- 4 Secure trim molding with the existing screw and an additional washer to the holder.
- 5 Further installation takes place in reverse order.

