

## 88-405 R and R Mercedes star

---


### Removal

---

1 Pull spring clip energetically down with water pump pliers and turn to the **left** by 90°.

2 Make sure that spring clip engages in grooves of rosette.

3 Pull Mercedes star out of radiator cowl in upward direction.

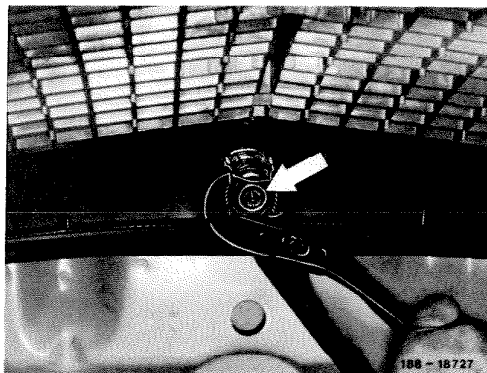

### Installation

---

4 Insert Mercedes star into radiator cowl and turn spring clip with water pump pliers to the **right** by 90°.

