

88-800 R and R lower side paneling


Note

Place plastic clips from opened packages in water to maintain their elasticity.

A. Paneling at front fender


Removal

- 1 Unclip paneling below.
- 2 Pull paneling downwards and disconnect at top.

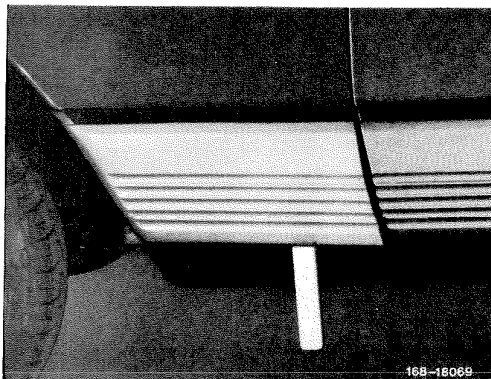

Installation

- 3 Push lower half of clips into front fender.
- 4 Attach paneling at top and clip-on below.

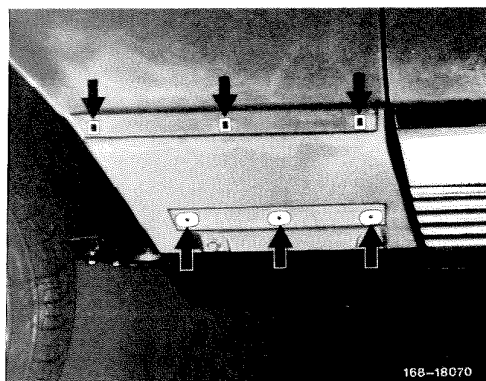


B. Paneling on driver's door

Removal


- 1 Remove paneling on front fender (88-800, section A).

88-800 R and R lower side paneling

2 Pull out sealing frame in range of fastening screw and unscrew nut.

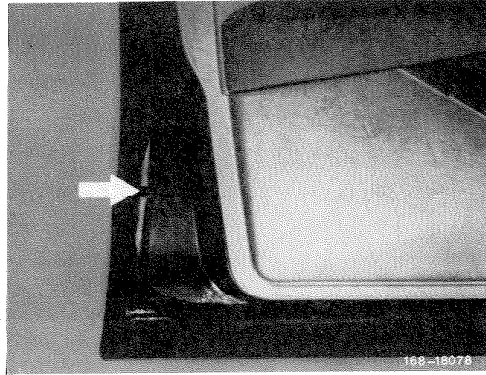


3 Unclip paneling at top (from the rear in forward direction; paneling is hung up at front top).

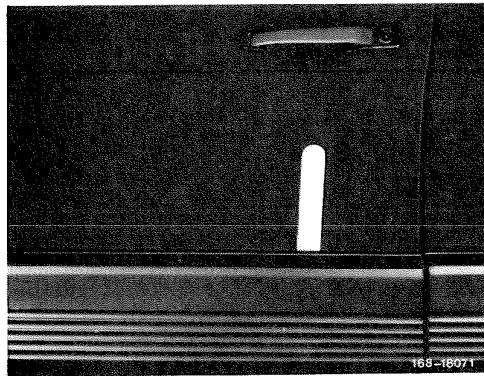

4 Unclip paneling below (from the front toward the rear; paneling is hung up at the rear below).

5 Slip paneling forward and disengage below at rear.

6 Pull paneling toward the rear and disengage at front top.

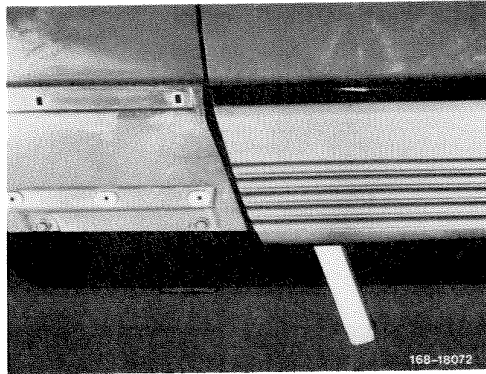

Installation

7 Push lower halves of clips into outside door panel.

8 For further installation proceed vice versa.

Note: Align paneling prior to tightening fastening screw.




88-800 R and R lower side paneling


C. Paneling on rear door

Removal

- 1 Pull out sealing frame in range of fastening screw and unscrew nut.
- 2 Open driver's door.

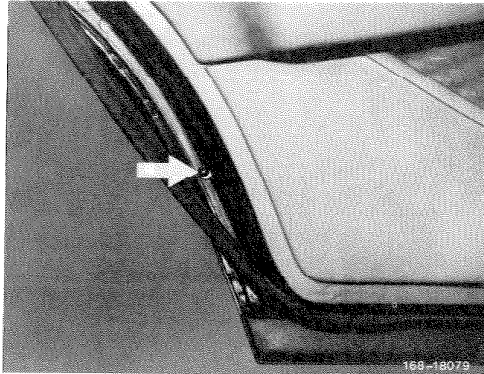


- 3 Unclip paneling at top (from the rear in forward direction; paneling is hung up at front top).

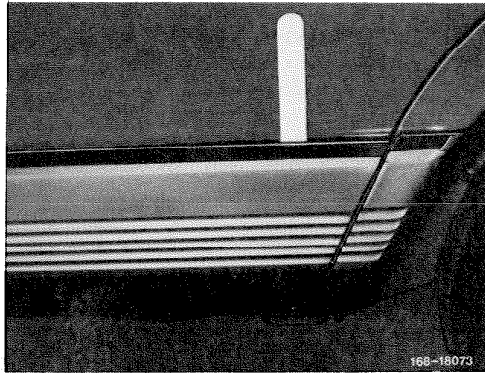

- 4 Unclip paneling below (from the front toward the rear; paneling is hung up at rear below).

- 5 Slide paneling forward and disengage at rear below.

- 6 Pull paneling toward the rear and disengage at front top.

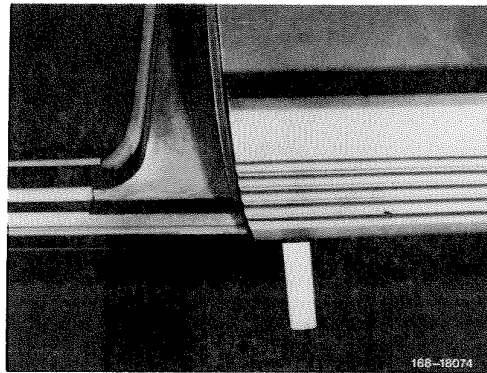


Installation

- 7 Push lower halves of clips into outside door panel.



- 8 For further installation proceed vice versa.

Note: Align paneling prior to tightening fastening screw.


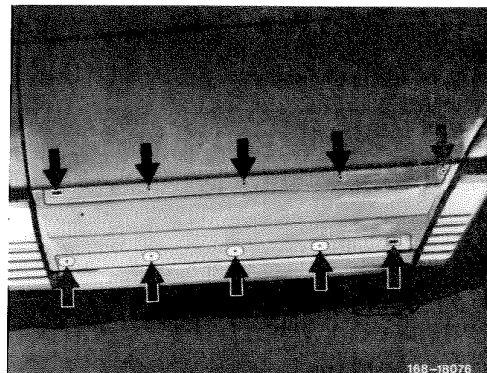


D. Paneling on rear fender**Removal**

- 1 Unclip paneling below.
- 2 Pull paneling downwards and disengage at the top.

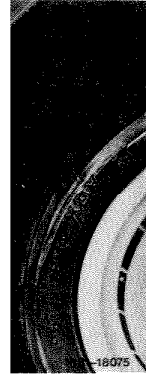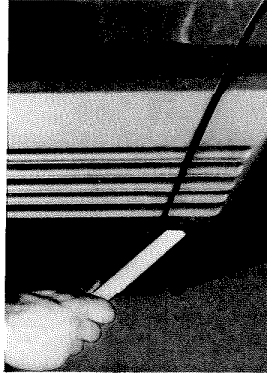**Installation**

- 3 Push lower halves of clips into rear fender.
- 4 Engage paneling at the top and clip-on below.

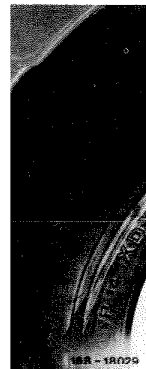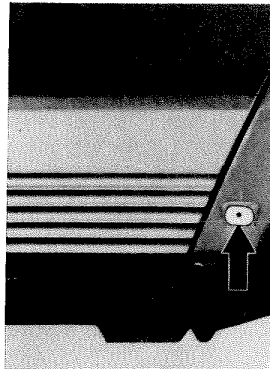


88-800 R and R lower side paneling

E. Side member paneling

Sedan, coupe

Paneling on front fender removed (88-800).

Paneling on rear fender removed (88-800).

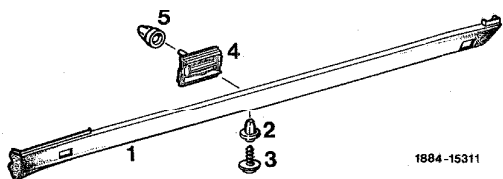

Screws (3)	unscrew
Paneling (1)	with plastic wedge on side member unclip and remove
Installation	in reverse order (observe assembly instructions)

Assembly instructions

Prior to installing the paneling, check clip upper parts (4) and clip lower parts (5), renew if required.

If the plugs (2) have to be renewed, these should be inserted with MB universal sealing compound.

Prior to securing the screws, line up paneling.