


Removal

1 Remove ornamental molding on front wall pillar left and right (88-850).


2 Pull lateral ornamental frame in downward direction out of connecting member.

3 Remove ornamental frame left and right.

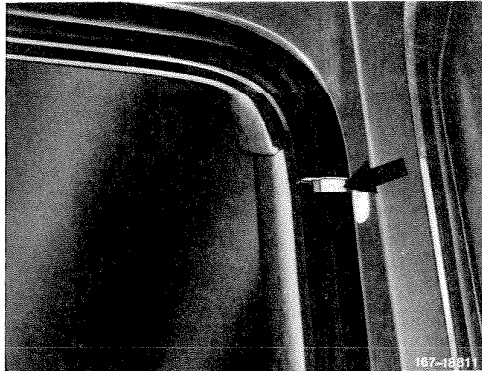

4 Push ornamental frame at top out of clips.

5 Remove ornamental frame at top.

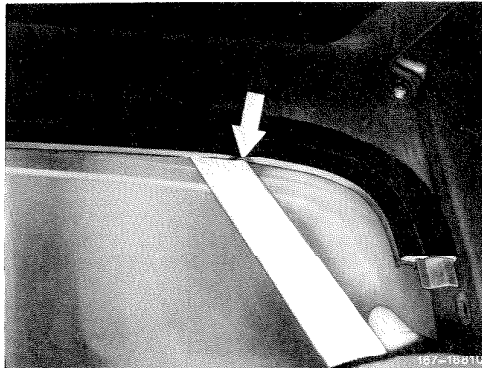

Installation

6 For installation proceed vice versa.