



68-430 R and R headliner

Removal


- 1 Remove reveal molding at windshield top (68-400).
- 2 Remove paneling on roof frame rear (68-447).
- 3 Remove paneling on center pillar (68-470)
(do not unscrew safety belt on side member).
- 4 Remove hand grips (push out covers and unscrew screws underneath) and pull-off chafing strip in range of headlining.

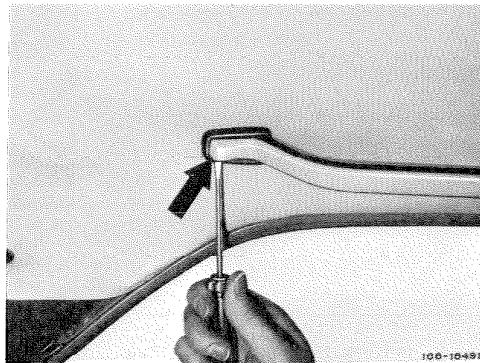


- 5 Release headlining laterally on roof fold.

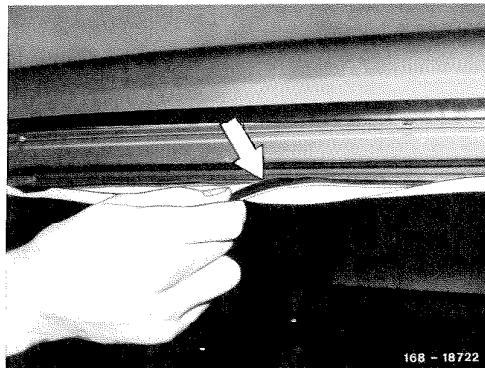


6 Push out clips on rear pillar left and right.

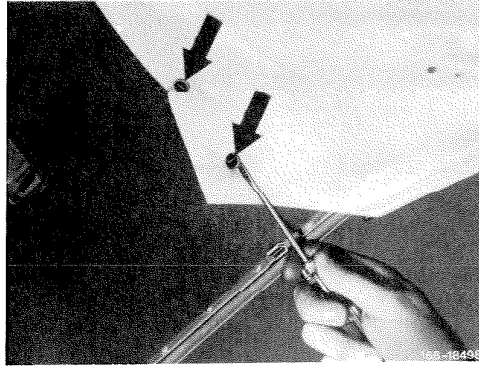

7 Push out clip on front wall pillar left and right.

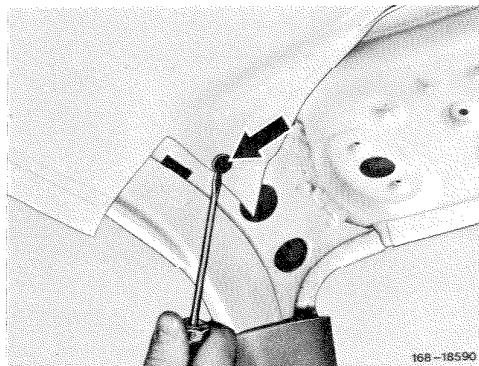


8 Push out clip on center pillar left and right.

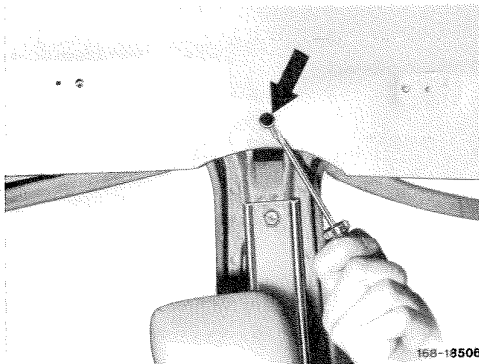


9 Release headlining on roof frame rear.

10 Release bows starting at the rear.

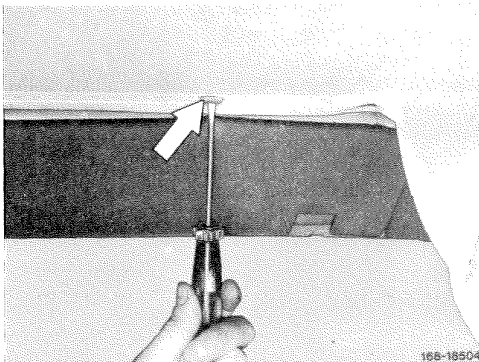

68-430 R and R headliner

11 Release headlining on roof frame at the front and remove.

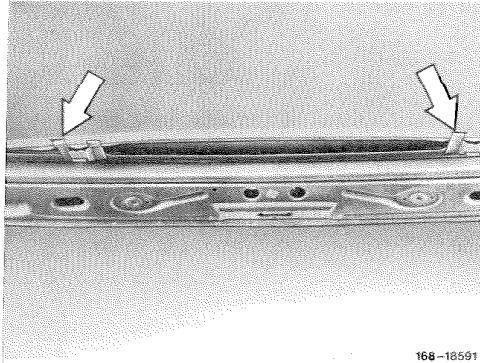

Installation

12 For installation proceed vice versa.