


Removal


1 Remove reveal molding at windshield laterally left and right (68-405).

2 Unscrew hand grip left and right.

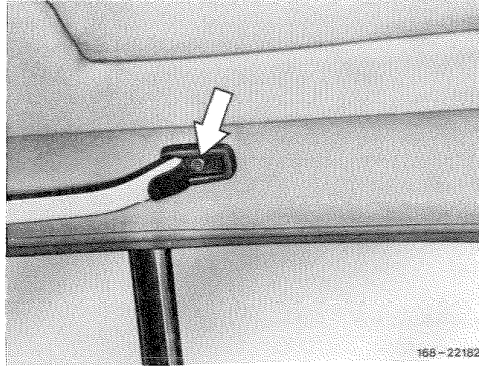


3 Unscrew sun vizors and counterbearing left and right.

4 Pull off inside mirror in downward direction.

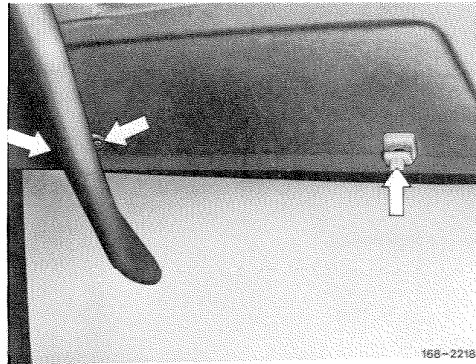


5 Unscrew base plate for inside mirror and unscrew sun vizor, center.

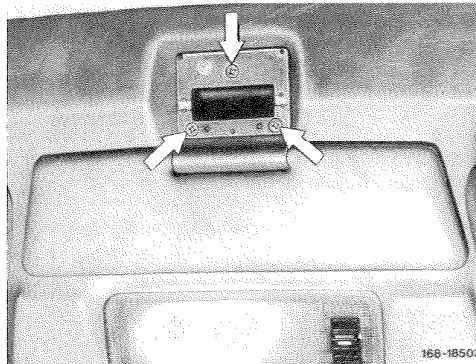

68-435 R and R headliner (coupe)

6 Force off dome lamp front and at the rear on recess by means of a screwdriver.

7 Pull off electric connections on both dome lamp

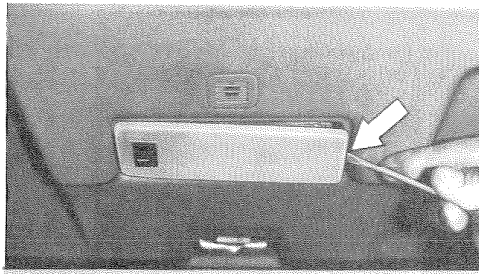


168-22184

8 Remove screw in cutout of rear dome lamp.

9 Remove lining on rear pillar (68-449).

10 Open sliding roof.


11 Open rear side windows and crank window at driver's door left and right.

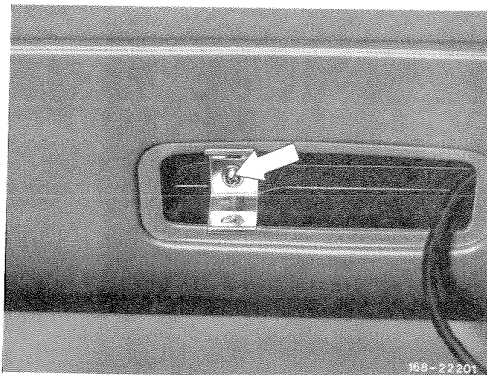

168-22201


12 Remove screws on slide rails left and right and remove slide rails.

13 Remove sliding top headlining.

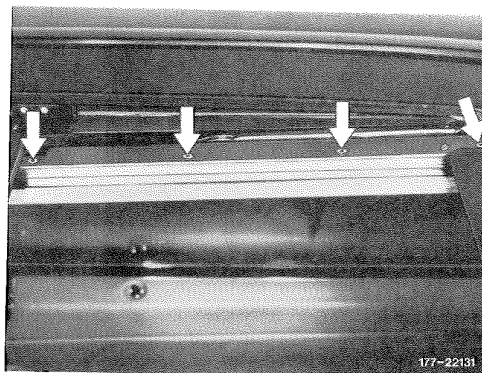


177-22131

14 Remove screws at covering strip on sliding top cutout front and remove covering strip.

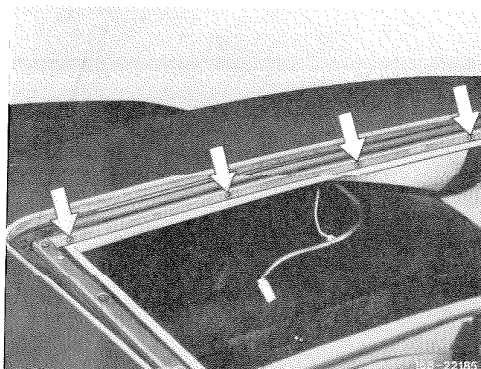

168-22185

15 Loosen glued-on reinforcing bar on sliding top cutout left and right.

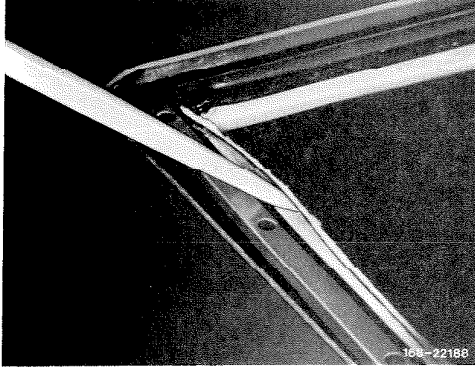


16 Loosen headlining on roof frame from window glass glue.



17' Pull out outer edge of ready-made headlining at sealing strip left and right.

18 Slide headlining forward and remove through cutout for door and rear side window.

Note: When lowering ready-made headlining, unclip inner sensor at roof frame lining front.

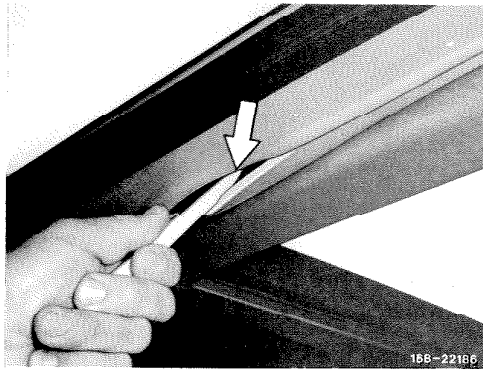


Installation


19 Lift headlining through cutout for door and rear side window into vehicle interior.

68-435 R and R headliner (coupe)


20 Attach headlining with holding clamps to roof (on vehicles with sliding top to rear of roof frame, on vehicles without sliding top to roof frame rear and in center).

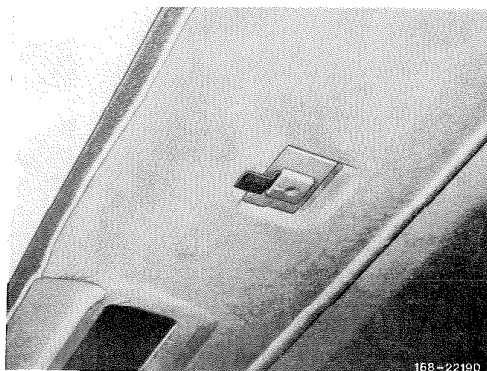

Note: Prior to screwing-on headlining in front range, pay attention to perfect seat of inner sensor.

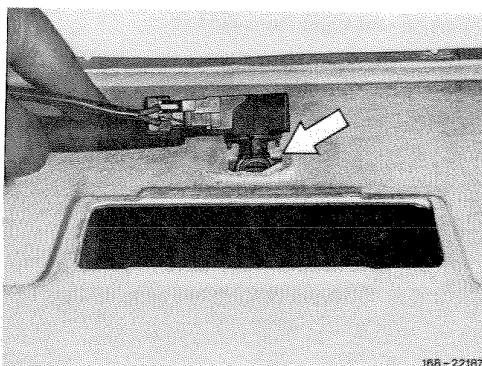

21 Pull out sealing profile left and right over outer edge of ready-made headlining.

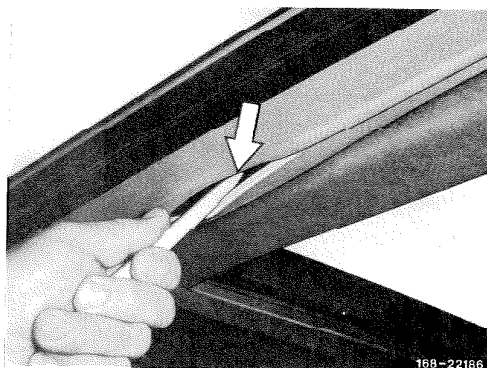

22 Pull out second inside rubber lip on sealing frame of rear window (back window) with plastic wedge over rear edge of headlining.

23 For further installation, proceed in vice-versa sequence.

