

68-490 R and R firewall sound deadening

Conventional tool


Hot-air blower, approx. 600 °C

e.g. "Jumbotherm type K 25"
made by Zinser, D-7333 Ebersbach/Fils

Removal

- 1 Push off fastening clips on front wall inside.
- 2 Heat front wall in range of insulation from outside with hot-air blower or the like and then pull off insulation.

Attention!
Use safety gloves.

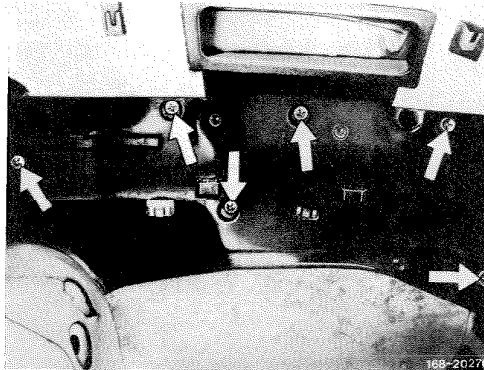

Installation

- 3 Coat insulation and front wall with MB-universal glue and permit to dry.
- 4 Fit insulation and press-on.
- 5 Push-in fastening clips.
- 6 For further installation proceed vice versa.