


Models 124, 126, 129, 140 and 201


As in lifting with a chassis hoist, place the supports directly on the hard rubber plates or hard rubber buffers (2) at the front and rear outer frame side members. However, only flat top supports are suitable for this purpose.

e.g. model 140

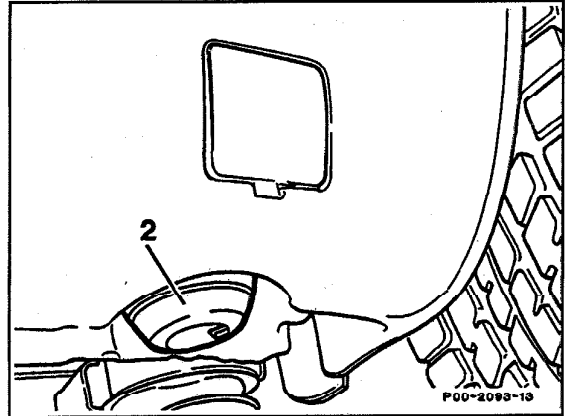

P00-2093-13-13

e.g. model 140

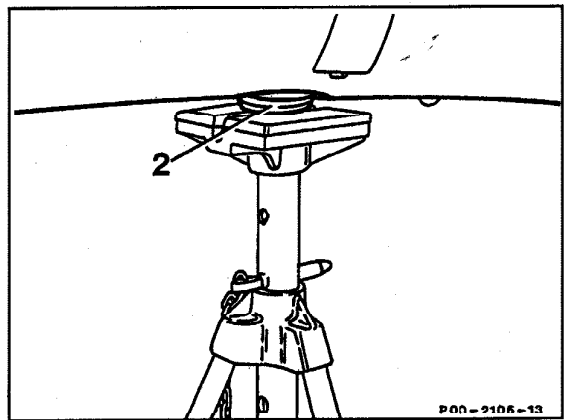

P00-2105-13