


68-150 R and R cover under instrument panel

Glove box removed (68-140)


Outer footwell covering (only front passenger side) removed.

Removal

- 1 Unscrew screw on front wall pillar.

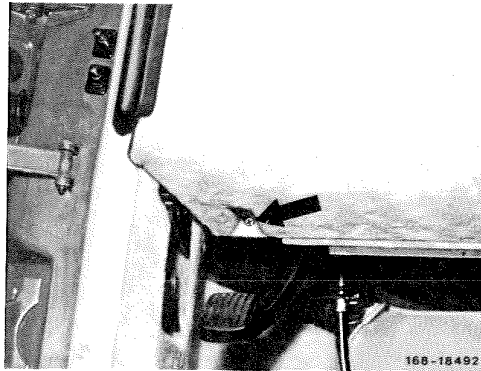


- 2 Unscrew screws on instrument panel.

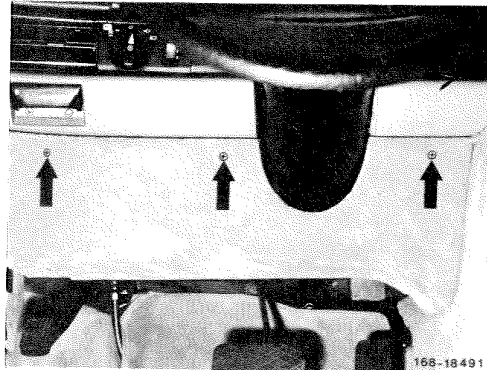

- 3 Turn plastic clip on center console by 90° to the left and pull out.


- 4 Remove cover.

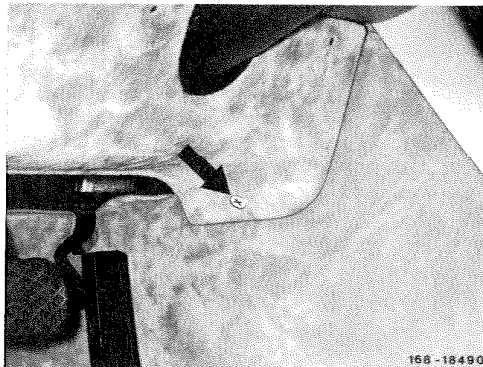

68-150 R and R cover under instrument panel


Installation

5 Plug the two parts of cover under instrument panel together.

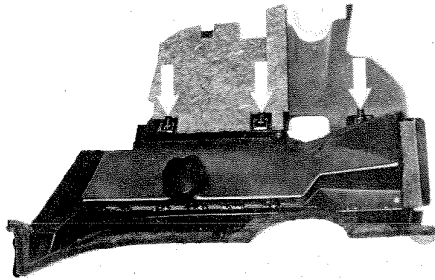


168-18485

6 Slip-on cover at lower heater outlet opening.

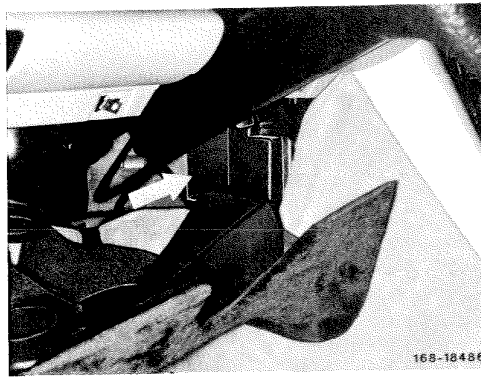


168-18486

7 Slip-on hose for nozzle on instrument panel.

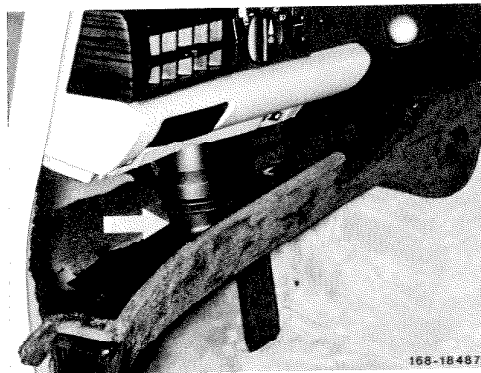

168-18487

8 Attach cover to clip on front wall.

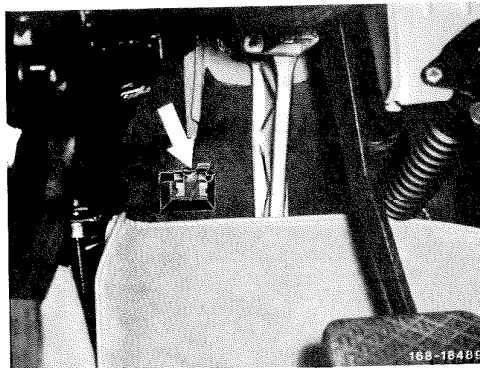

168-18489

68-150 R and R cover under instrument panel

9 Attach cover to center console.

10 For further installation proceed vice versa.

