


### Removal

---

- 1 Pull-off chafing strip in range of reveal molding.
- 2 Position plastic wedge in range of clips and knock with a hammer on plastic wedge.
- 3 Release reveal molding from roof frame at top and remove.

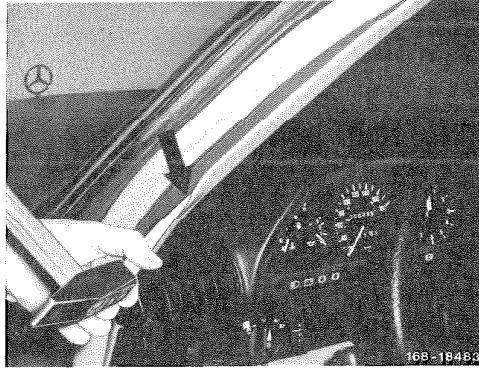

### Installation

---

- 4 Align clips on reveal molding.
- 5 For further installation proceed vice versa.

