



88-850 R and R A-pillar molding

Removal

- 1 Open engine hood.
- 2 Unscrew screw below on ornamental molding.

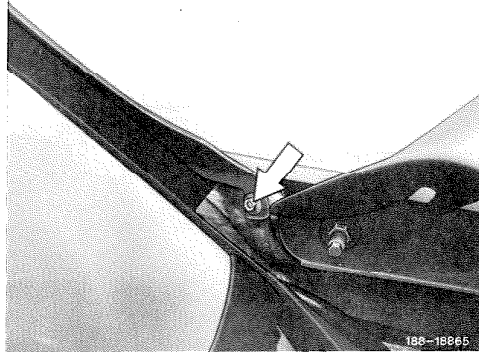

- 3 Push rubber lip aside and unscrew the four screws underneath on front wall pillar.
- 4 Pull ornamental molding forward and disengage at roof paneling.

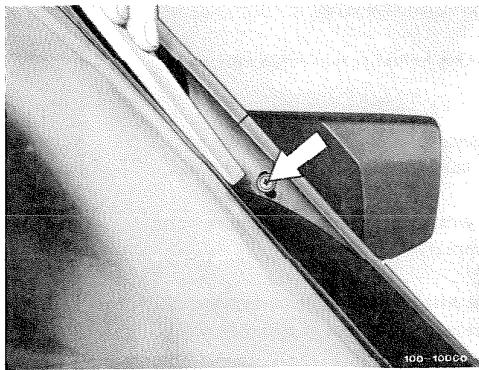

Installation

- 5 Attach ornamental molding to roof paneling.
- 6 For further installation proceed vice versa.

