

91-119 R and R vacuum switch for front seat backrest (coupé)


Color code of vacuum lines for backrest lock

Control line


light blue

Removal

- 1 Unscrew screws on tensioning member below.
- 2 Slip tensioning member in upward direction and remove.

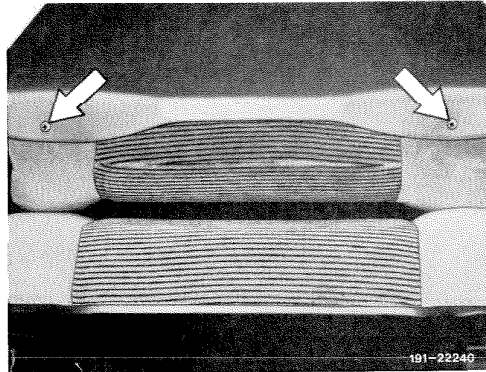

- 3 Pull vacuum line from switch.

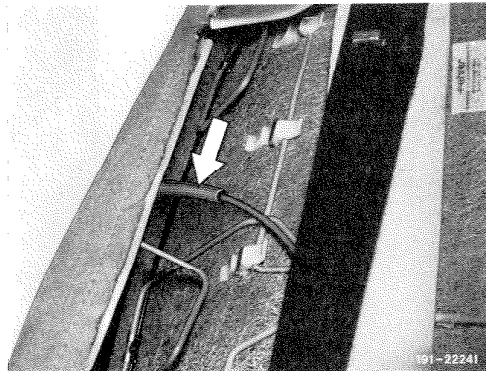

- 4 Separate lock with side-cutting pliers and pull vacuum switch out of driver's seat backrest.

Installation

- 4 For installation proceed vice versa.

Note: During installation, place new lock on vacuum switch.

