
## ENGINE 601 in MODEL 201 up to 31.3.85 ENGINE 603 in MODEL 126

## A Models 126, 201 (vehicles with rubber mounts)

1, 1a, 2, 5, 6, 7, 7a Front engine stop
25 Front engine mount
34 Engine shock
absorber
22 Shield, model 201

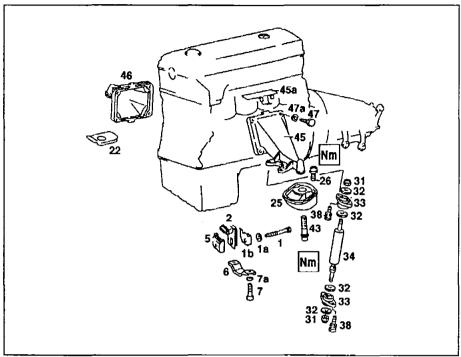

P22.10-0255-06

HH	Removing, installing		
1	Remove bottom engine compartment panel		
2.1	Detach air intake hose	Model 201	
3.1	Take off bracket of engine stop (6)	Model 201	22-215
		1 Installation: Inspect engine stop, adjust.	22-220
4	Take off engine shock absorber (34) at frame crossmember		22-240
5	Attach engine hoist to front lifting eye of engine		WH58.30-Z-1001-07A
6	Unscrew hexagon bolts (26) at left and right engine brackets	, Nim	BA22.10-P-1004-01J
7.1	Take off shield (22) at right engine bracket	Model 201	
8	Unscrew hexagon socket bolts (43) at left and right frame members	Nim	BA22.10-P-1001-01J
9	Raise engine with engine hoist		
10	Remove left and right engine mounts (25)		
11	Install in the reverse order		

## Engine mounts, engine brackets

Number	Designation		Engine 601 in model 201 with front rubber engine mount	Engine 603 in model 126 with front rubber engine mount
BA22.10-P-1001-01J	Bolt of front engine mount to body/front axle carrier	Nm	40	70
BA22.10-P-1004-01J	Bolt of front engine bracket to engine mount	Nm	25	25

## Commercially available tools (see Workshop Equipment Manual)

Number	Designation	Make (e.g.)	Order number
WH58.30-Z-1001-07A		Bäcker Herderstraße D-42853 Remscheid	3188