


## 32-220 Adjustment of front springs

### Cross reference of front springs - rubber spacers

Total number of points		Front spring Part no.	Height of rubber spacers depending on spring color code (mm)	
Basic version			blue	red
up to 08/88	as of 09/88			
up to 13	up to 15	126 321 30 04	13	18
14 - 18	16 - 20		18	23
19 - 23	21 - 26	126 321 16 04	8	13
24 - 30	27 - 31		13	18
31 - 35	32 - 37		18	23
36 - 41	38 - 43	126 321 17 04	8	13
42 - 47	44 - 49		13	18
48 - 53	50 - 55		18	23
54 - 59	56 - 61	126 321 18 04	8	13
60 - 66	62 - 68		13	18
67 - 72	69 - 74		18	23
73 - 79	75 - 81	126 321 20 04	8	13
80 - 86	82 - 88		13	18
over 86	89 - 95		18	23

### Rubber spacers for front springs

Height "a" mm	Number of nubs (n)	Part no.
8	1	126 321 07 84
13	2	126 321 08 84
18	3	126 321 09 84
23	4	126 321 10 84

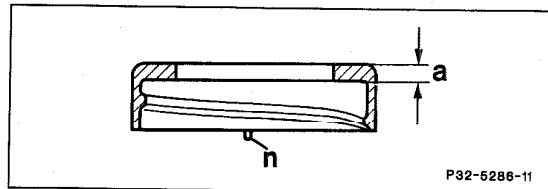

"a" Height of rubber spacer

## 32-220 Adjustment of front springs

### Front springs

Number of points/Model/Version	National version 1) (USA)											
	024	025	032	035	037	039	044	045	120	125	134	135
Model 126												
Basic number of points up to 08/88	-	40	29	48	35	73	24	60	34	52	-	-
as of 09/88	33	38	-	48	-	56	-	47	-	-	56	61
Air conditioner or automatic climate control	S	S	8	S	8	S	8	S	8	S	S	S
Automatic transmission	S	S	5	S	5	S	5	S	5	S	S	S
Anti-lock braking system	-	-	3	-	3	-	3	-	3	-	-	-
Tilting/sliding roof	2	2	-	2	-	S	-	S	-	2	2	2
Automatic level control or ASD 2)	2	2	2	2	2	S	2	S	2	S	2	2
Underbody protection	-	-	1	-	1	-	1	-	1	-	-	-
Airbag	S	S	1	S	1	S	1	S	1	S	S	S
Electrically operated windows (4)	S	S	1	S	1	S	1	S	1	S	S	S
Tempomat/cruise control	S	S	1	S	1	S	1	S	1	S	S	S
Front seats (electrical)	S	S	1	S	1	S	1	S	1	S	S	S

S = Standard version

- = Not available

1) In each case the basic number of points includes the special equipment supplied for the national version.

2) ASD only on models 126.02.