


F1	Fuse and relay box	S47	Left front door actuator
M14/2	Supply pump (CL/OSB)	S48	Right front door actuator
M14/2x1	Supply pump voltage supply connector (CL/OSB)	S49	Trunk lid lock actuator
M14/2x2	Supply pump control line connector (CL/OSB)	W1	Main ground (behind instrument cluster)
S8/2	Warning buzzer contact (exterior lamps/CL)	Z	Connector sleeve (solder joint in harness)
S8/2x	Connector, warning buzzer contact lighting/central locking system		

Black cable from M14/2x1 jack 2 to F1, fuse 9 is only installed with orthopedic backrest.

B. As of approx. 09/85 to approx. 04/86

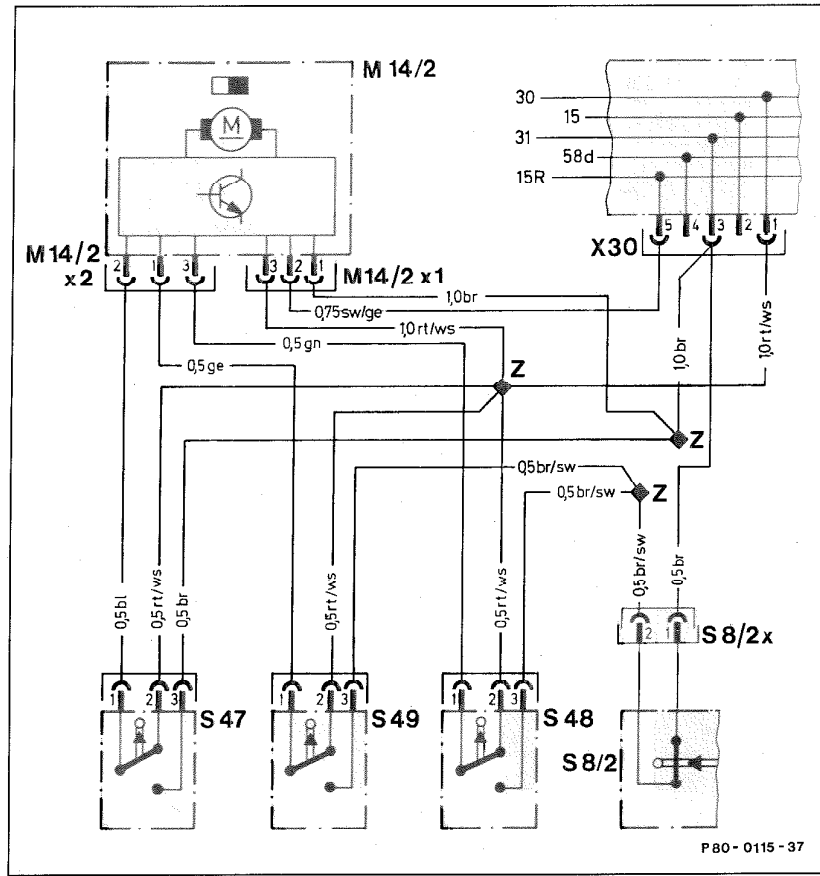


P80-0115-37

M14/2	Supply pump (CL/OSB)	S47	Left front door actuator
M14/2x1	Supply pump voltage supply connector (CL/OSB)	S48	Right front door actuator
M14/2x2	Supply pump control line connector (CL/OSB)	S49	Trunk lid lock actuator
S8/2	Warning buzzer contact (exterior lamps/CL)	X30	Accessory equipment connector block
S8/2x	Connector, warning buzzer contact lighting/central locking system	Z	Connector sleeve (solder joint in harness)

Note

Black/yellow cable from M14/2x1 jack 2 to X30
jack 5 is only installed with orthopedic backrest.

C. As of approx. 05/86

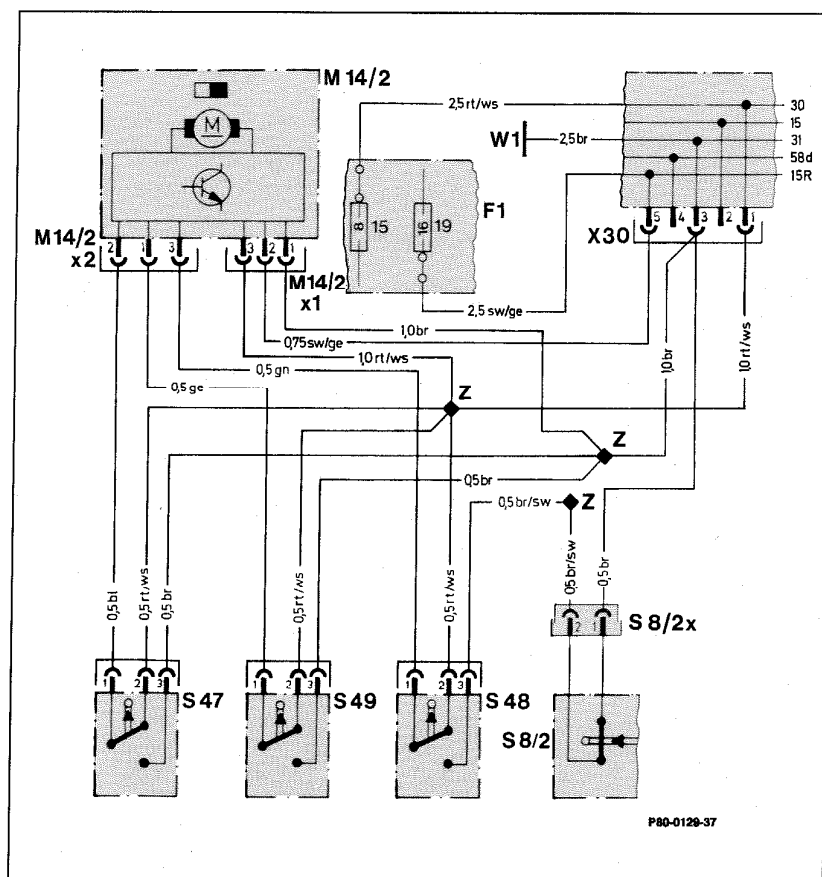

P80-0129-37

F1	Fuse and relay box	S47	Left front door actuator
M14/2	Supply pump (CL/OSB)	S48	Right front door actuator
M14/2x1	Supply pump voltage supply connector (CL/OSB)	S49	Trunk lid lock actuator
M14/2x2	Supply pump control line connector (CL/OSB)	W1	Main ground (behind instrument cluster)
S8/2	Warning buzzer contact (exterior lamps/CL)	X30	Accessory equipment connector block
S8/2x	Connector, warning buzzer contact lighting/central locking system	Z	Connector sleeve (solder joint in harness)

Note

Black/yellow cable from M14/2x1 jack 2 to X30 jack 5 is only installed with orthopedic backrest.