



A. Removing control unit


- 1 Disconnect battery.
- 2 Remove radio.
- 3 Remove option switch.
- 4 Unscrew screws (61) and carefully pull wooden cover panel on underside (refer to arrow) out of center console.

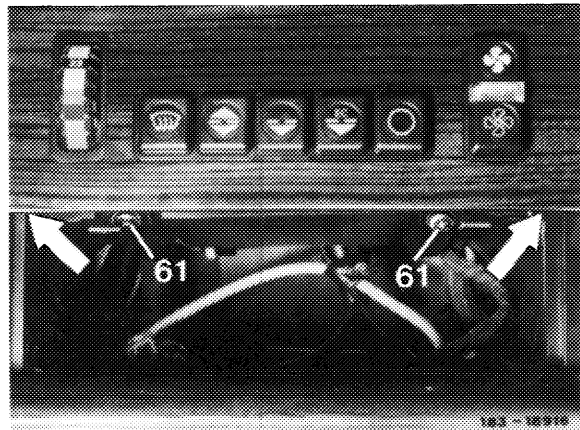

- 5 Loosen screws (62), pull out control unit in forward direction and remove lamps for instrument lights from control unit.

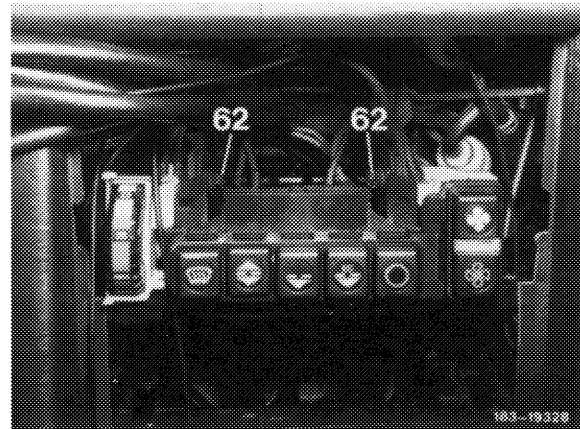


- 6 Pull 12-point plug, left and right, from control unit.

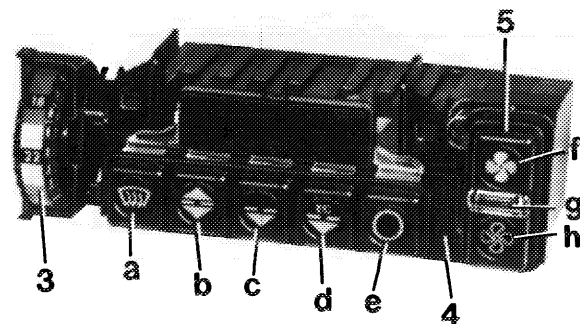

## B. Removal and installation of temperature dial

### Removal


1 Unclip temperature dial (3) from control unit and pull off.

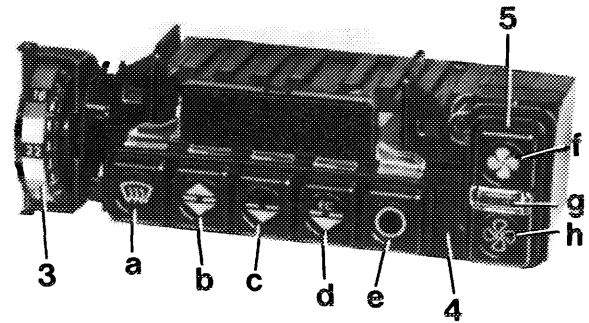

183-17660/1

### Installation

2 Position temperature dial (3) against control unit and fasten with clip (63).

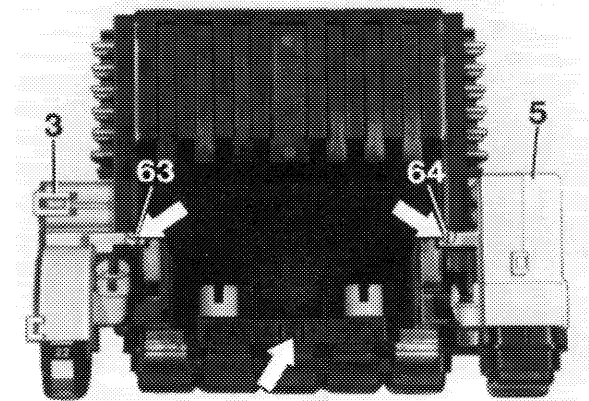


183-19328

## C. Removal and installation of blower switch

### Removal

1 Pull out clip (64). Remove plastic cover (refer to arrow) from control unit, beginning at blower switch (5), so that pushbuttons will drop out individually.


2 Unclip blower switch (5) on control unit (refer to arrow) and remove blower switch (5).

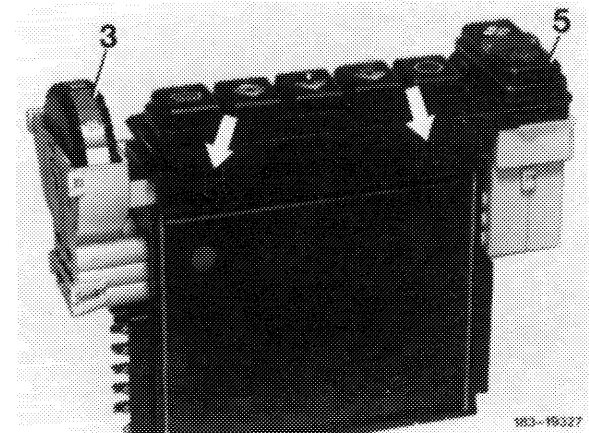

183-19327

### Installation


3 Position blower switch (5) with clip (64) at control unit and mount plastic cover. Reinstall pushbuttons under slight pressure with a circular motion.

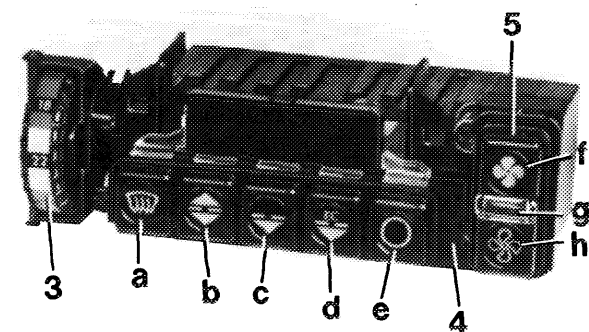


183-17660/1

## D. Installing control unit

- 1 Mount 12-point plugs at left and right, as well as lamps for instrument lights.
- 2 Install control unit in holder and mount provisionally with screws (62).

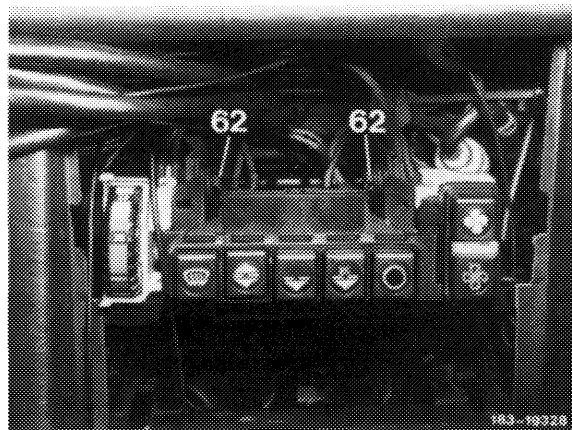

**Note:** Installation is considerably facilitated by a self-made installation gauge (Fig.), part no. 126 680 83 39. Mount installation gauge similar to wooden cover plate.

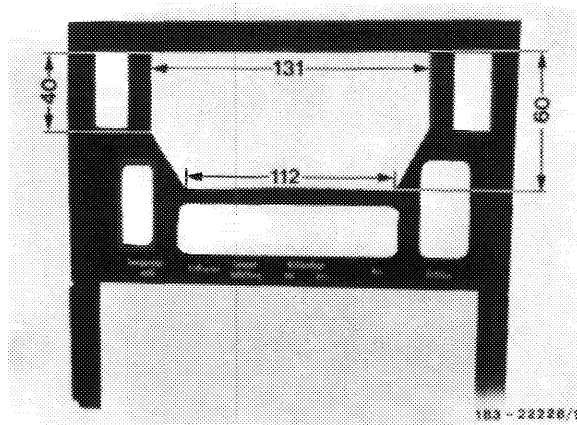

- 3 Insert wooden cover panel into center console as well as control unit and mount by means of screws (61).
- 4 Install option switch
- 5 Install radio.
- 6 Connect battery.
- 7 Check automatic climate control for function.

