


## 42-0510 R and R parking brake pedal assembly

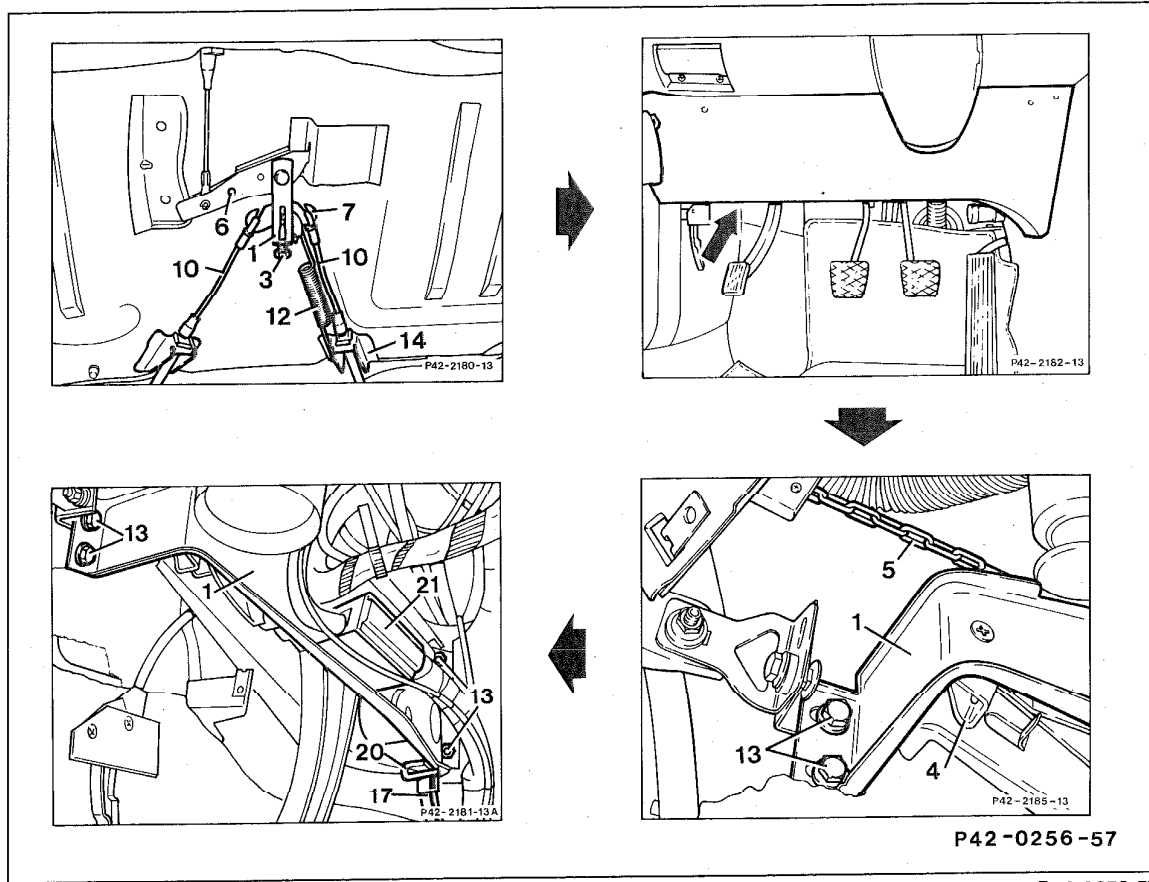

- |  |   |
|--|---|
| Return spring (12) .....                         | unhook on mount (14), hook in and turn back adjustment screw (3) on adjustment bracket (1). Adjust parking brake (42-0540). |
| Cover (arrow) .....                              | remove below instrument panel, install.   |
| Chain (5) .....                                  | unhook on actuating lever (4), hook in.   |
| Brake control cable (17) .....                   | unhook from pull tab on pedal (15), hook in.  |
| Spring clip (20), brake control cable (17) ..... | remove.   |
| Plug connector (21) .....                        | disconnect from holder (1), install.  |
| Plug connector .....                             | disconnect on parking brake warning light switch, connect.  |
| Hex. head bolts and hex. nuts (13) .....         | screw out, screw in, remove complete pedal assembly.  |